

Plustek eBookScan User's Guide

Product Overview

This program helps you to easily scan and digitize the contents of a book and save it in a readable file format.

System requirements:

 
- Windows operating system (XP / Vista / 7)
- Screen resolution min. 1024 x 768 pixel
- Plustek OpticBook series scanner: OpticBook A300 / 3600 / 3800 / 4600 / 4800

Step.1 Download Plustek eBookScan from here:


http://plustek.com/rd_files_space/library_downloads/User_Software/Plustek_eBookScan_SetUp.zip

Step.2 Connect Plustek OpticBook series scanners with computer.

Double-click the icon  on the desktop

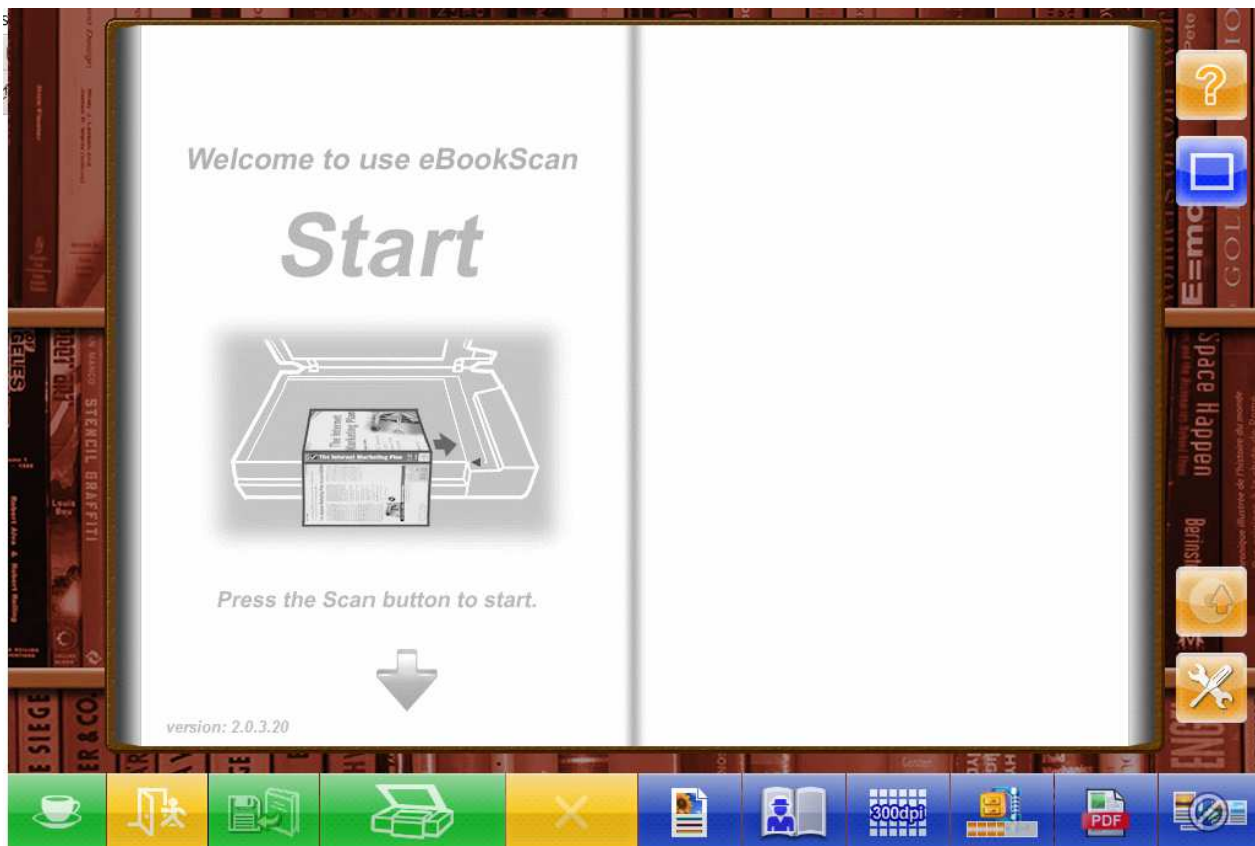







Step.3 Adjust the scanning settings

Click the icon 



 
After adjusting the scanning settings, click “Apply” to save the settings.

You can also adjust the scanning setting by the function icon:

Icon	Function	Icon	Function
	<u>Scan Mode:</u> Auto, Color, Gray, & BW		<u>Quality:</u> Best, Better, Standard, Low
	<u>Scan Size:</u> Auto, Custom(Book), A4, Letter, Full Size		<u>Format:</u> PDF, JPG, TIFF, Searchable PDF
	<u>Resolution:</u> 200 dpi, 300 dpi, 400 dpi, 600 dpi		<u>Merge:</u> Horizontal merge, Vertical merge

Step.4 Start to scan


Click the icon  to scan files.

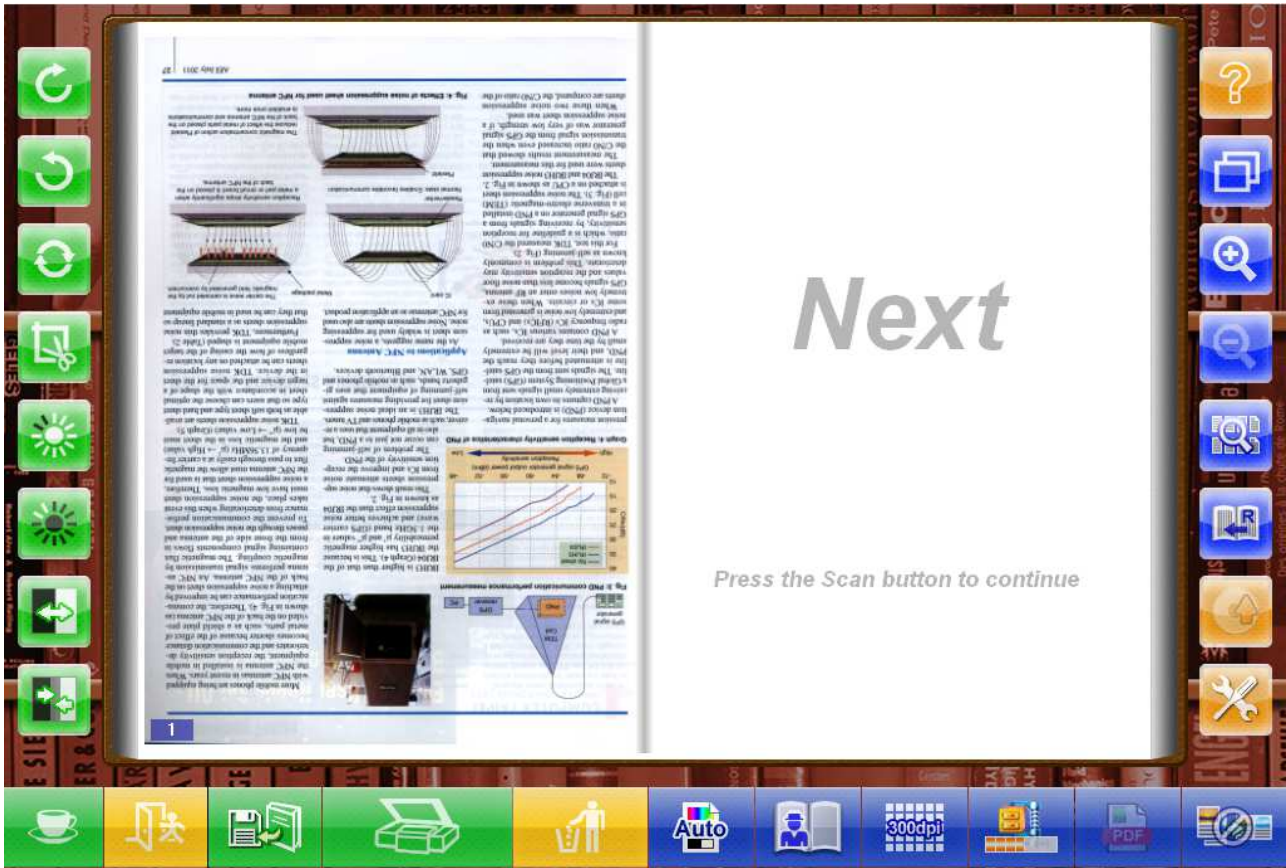

Press the Scan button to continue


Click the icon  to rotate the scanned image.

 


Click the icon  to change the reading direction.

 


Step.5 Preview the scanned image

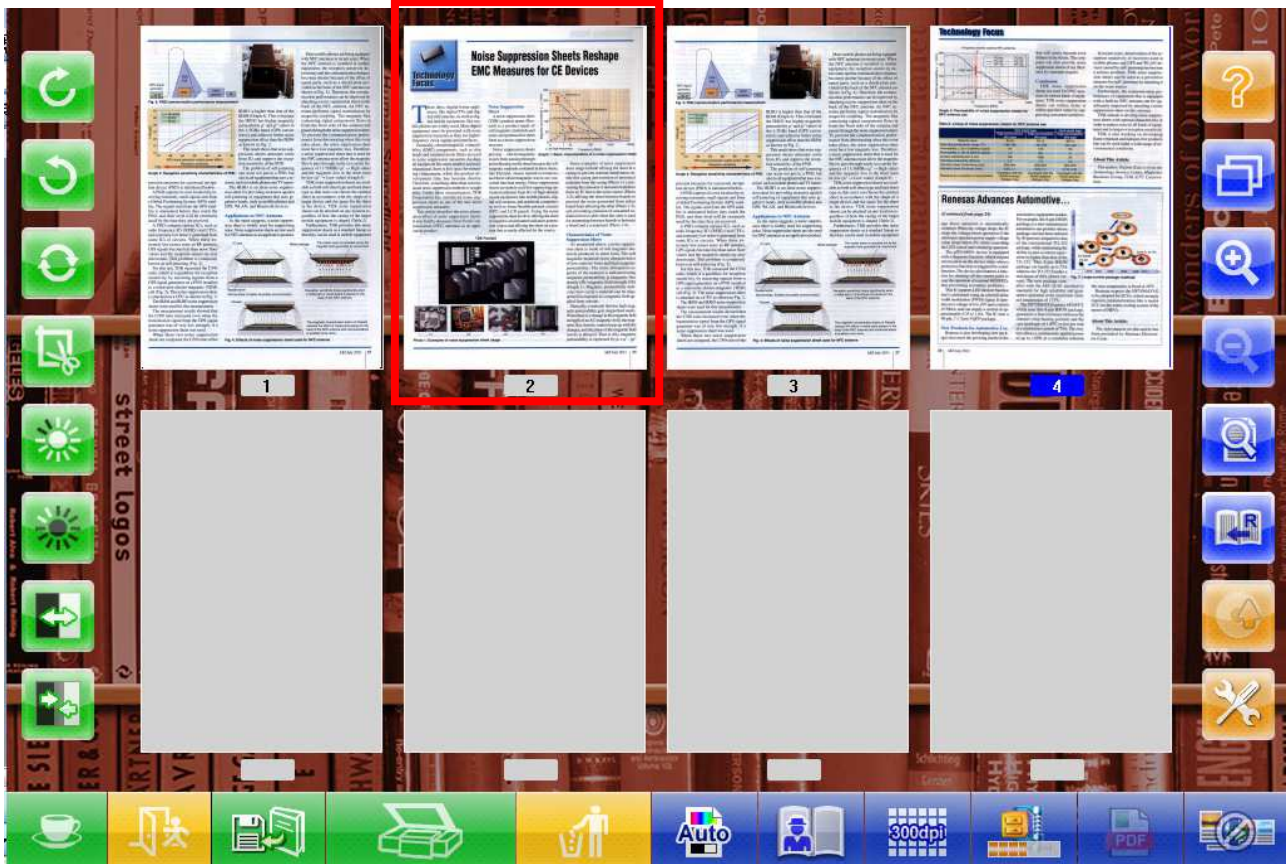

Click the icon  to preview the scanned images.

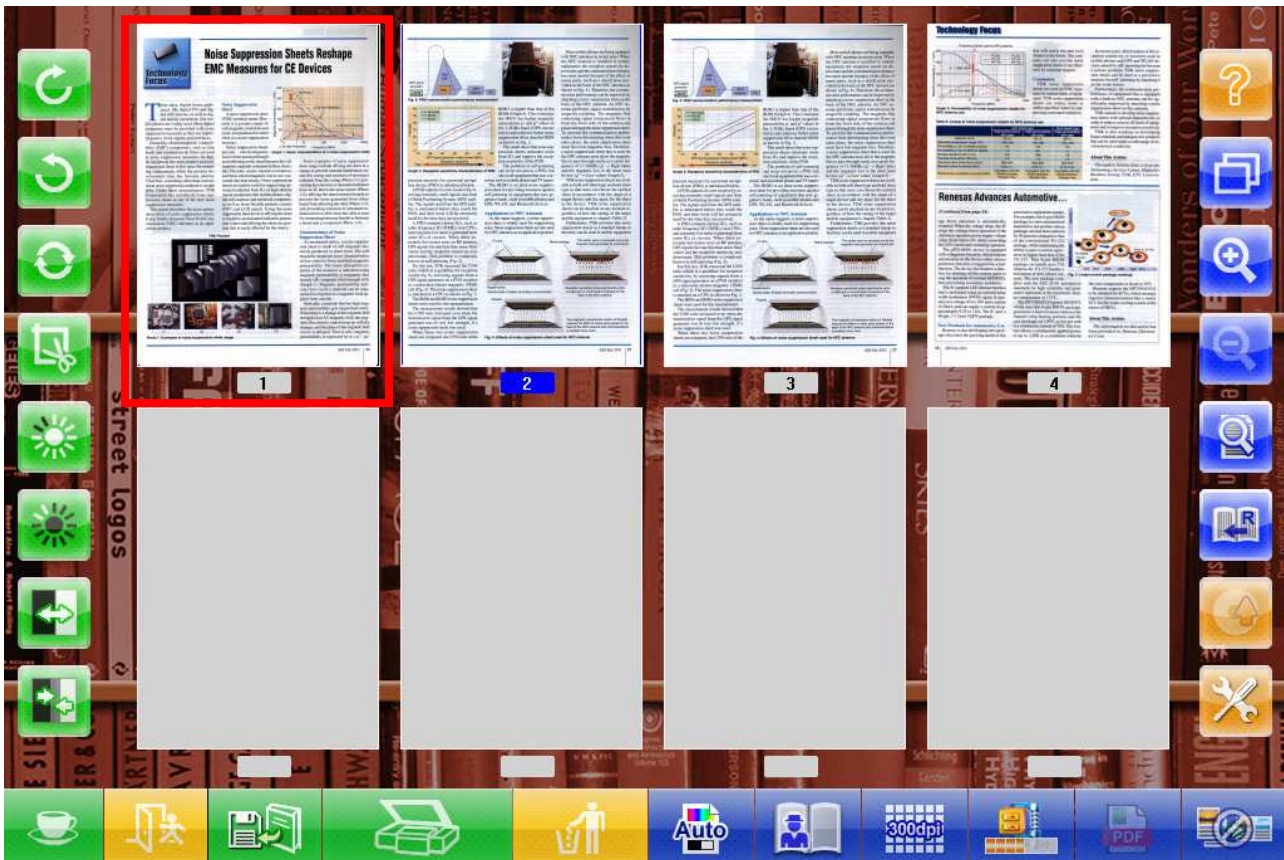 


Use mouse to drag the image adjusting the image order.



Step.6 Enlarge the scanned image

Click the icon   to zoom-in or zoom-out the scanned image

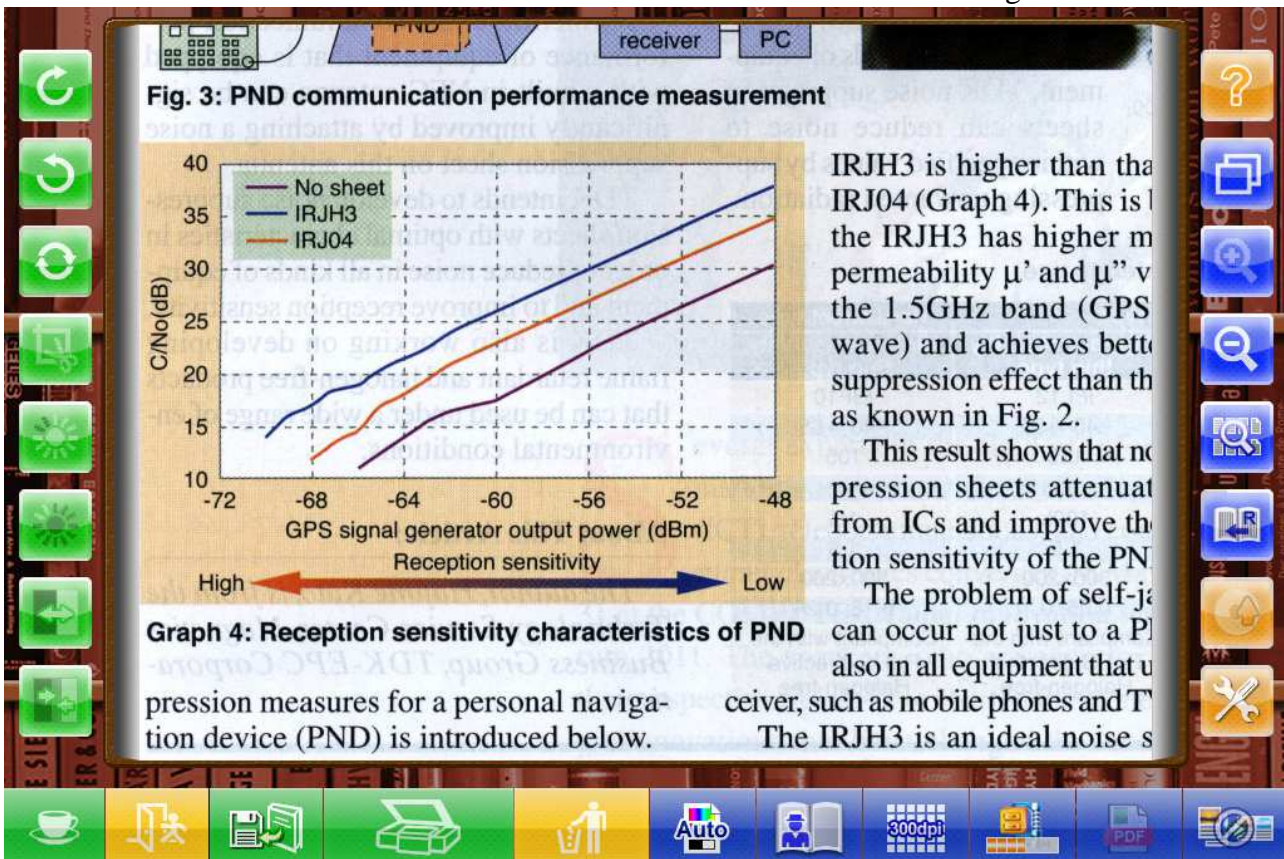

Step.7 Save the file



Click the icon to save the scanned image.

